



Show as below:


- 1、 “Wizard”
- 2、 “Job”
- 3、 “RIP”
- 4、 “Send”
- 5、 “Estimate”
- 6、 “Nest”
- 7、 “Unnest”
- 8、 “Abort”
- 9、 “Delete”
- 10、 “Help”

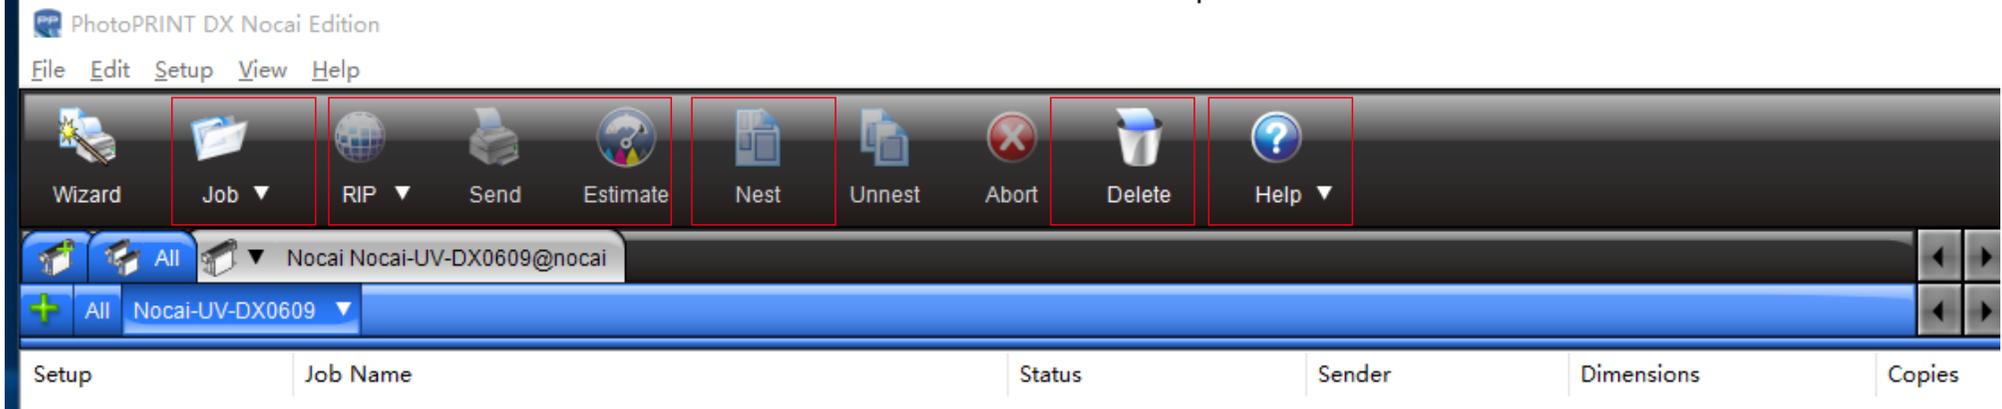


Click "Job" to add photo into PP shows as below:

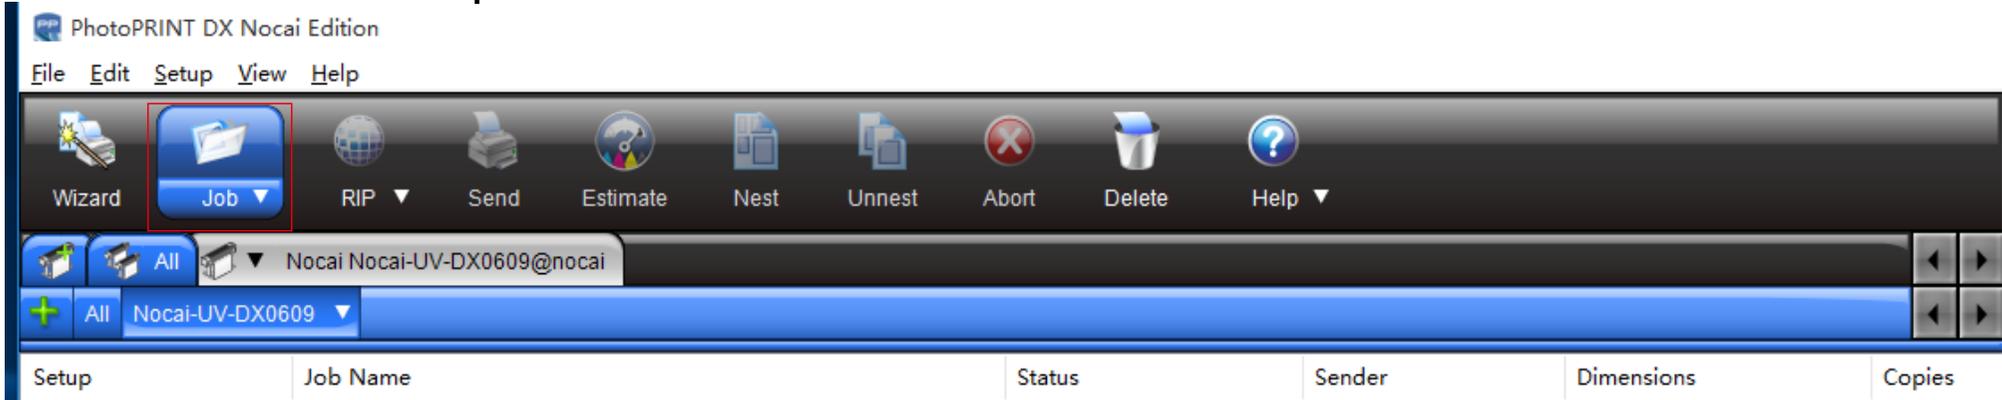


Page 1: Double click the object added and set information. Need to modify Size、Position of Job.

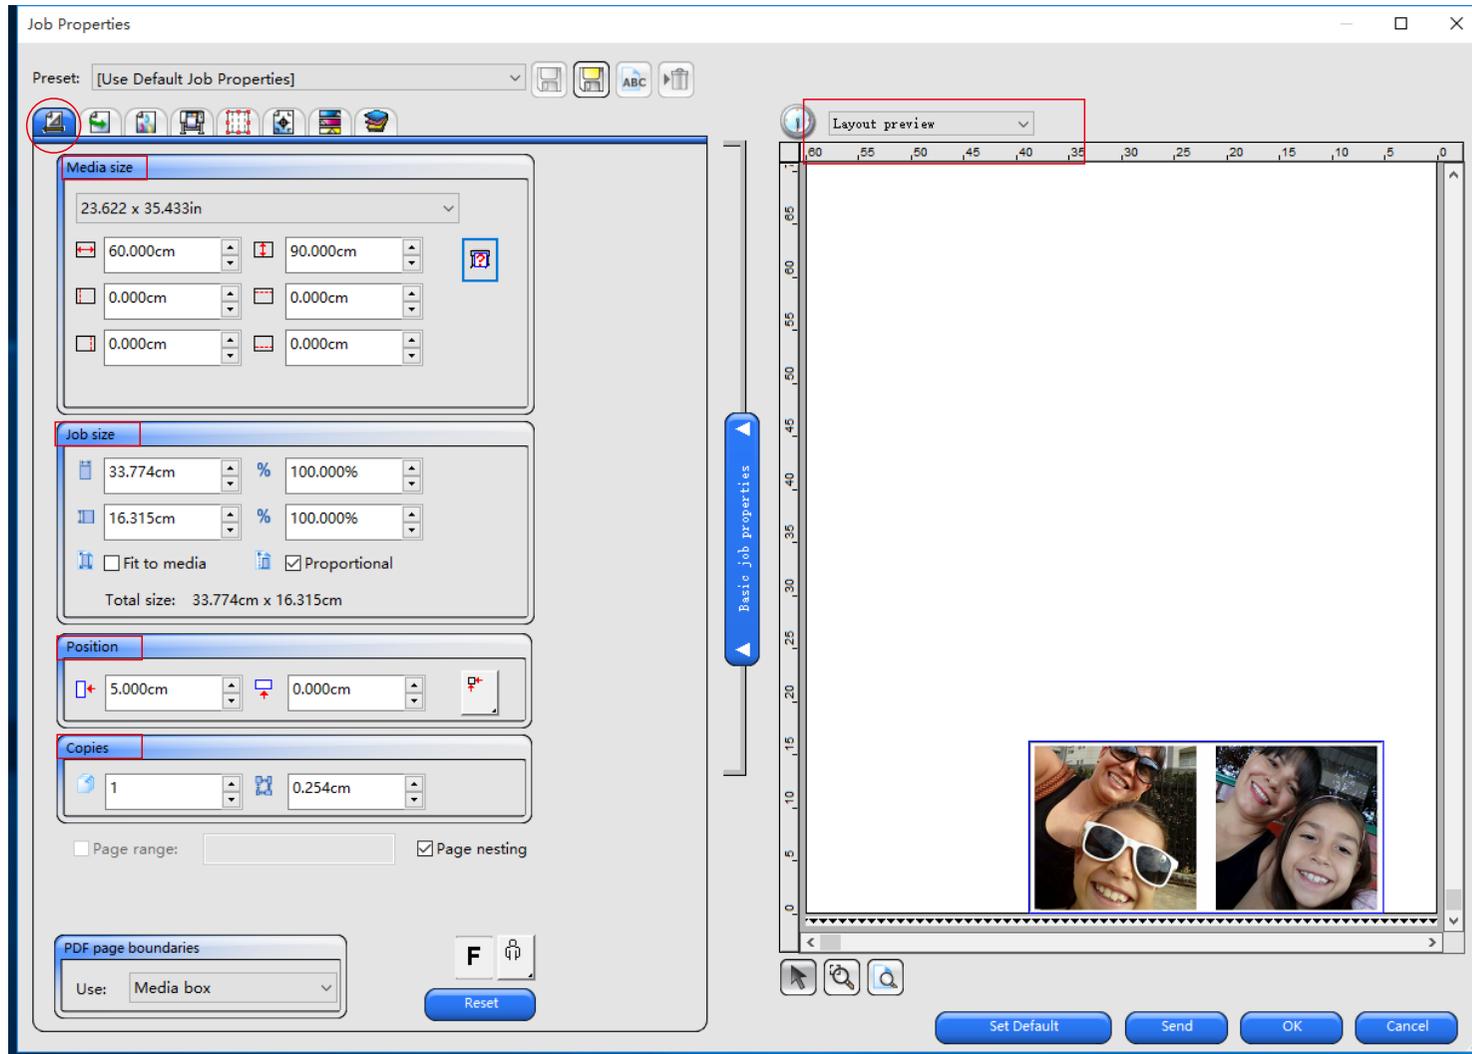


Page 2: Work flow page: Set as below. After output: Hold (Save Object and Settings)
:Delete (Delete Object after printing) Repeat Object: Print photo repeatedly.

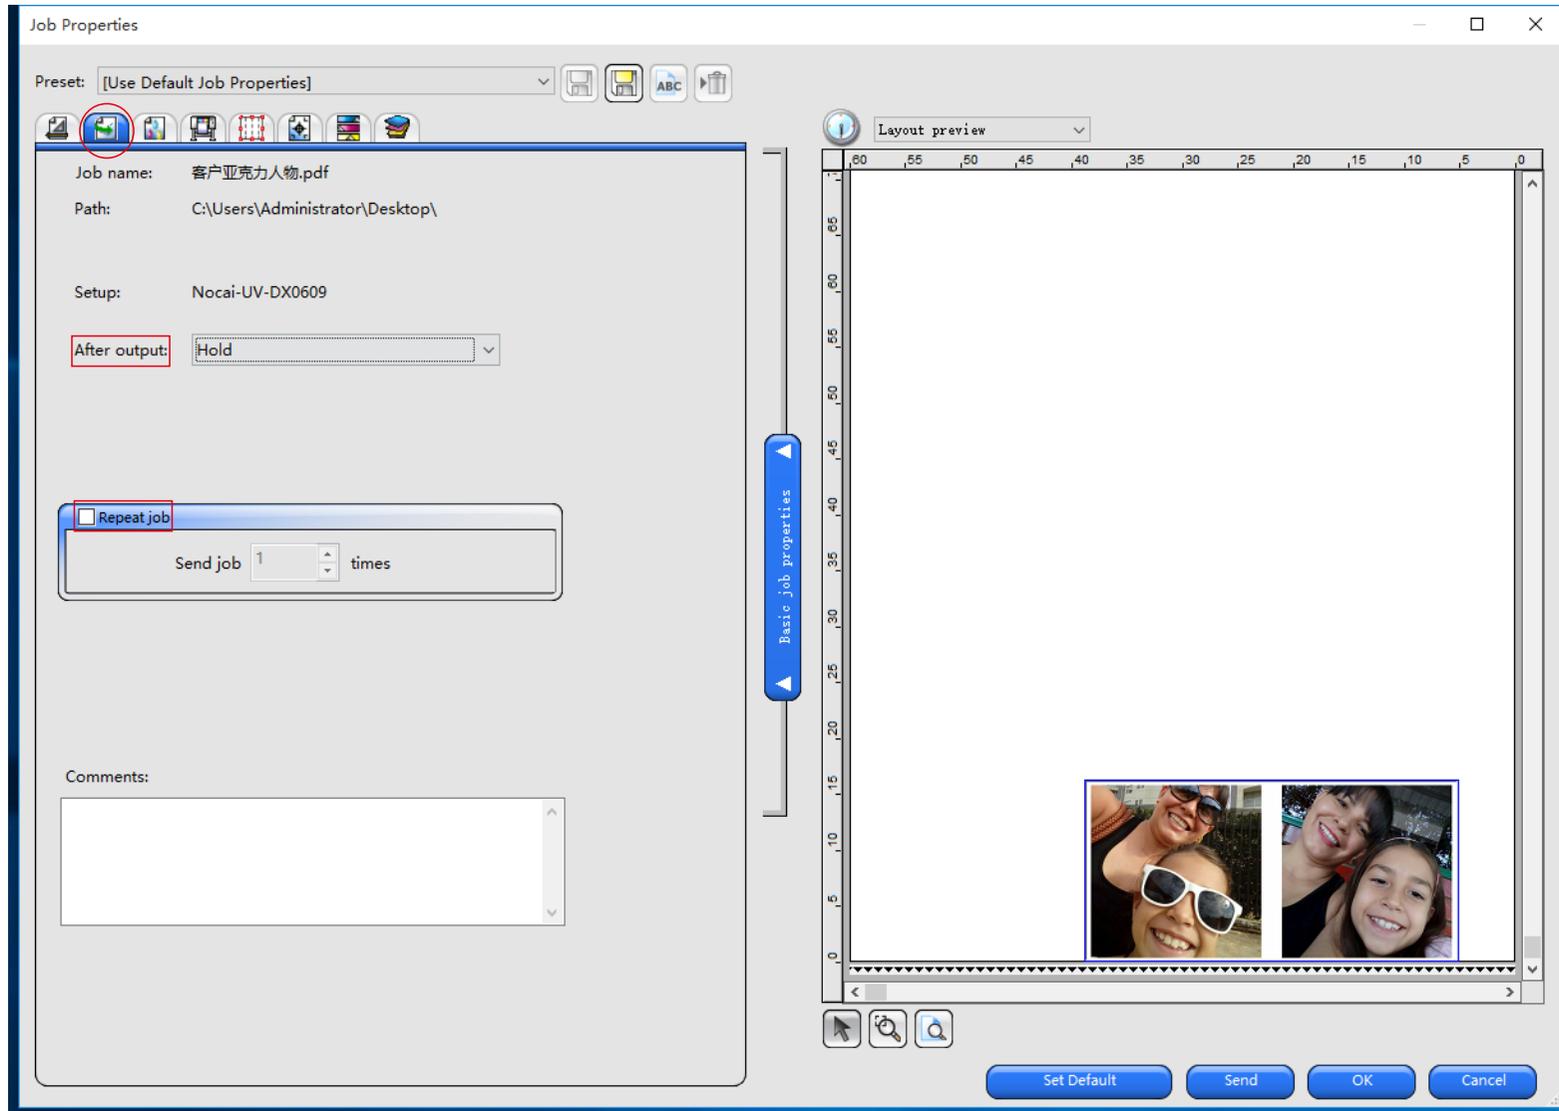


Page 3: Set output icc profile of Color correction.

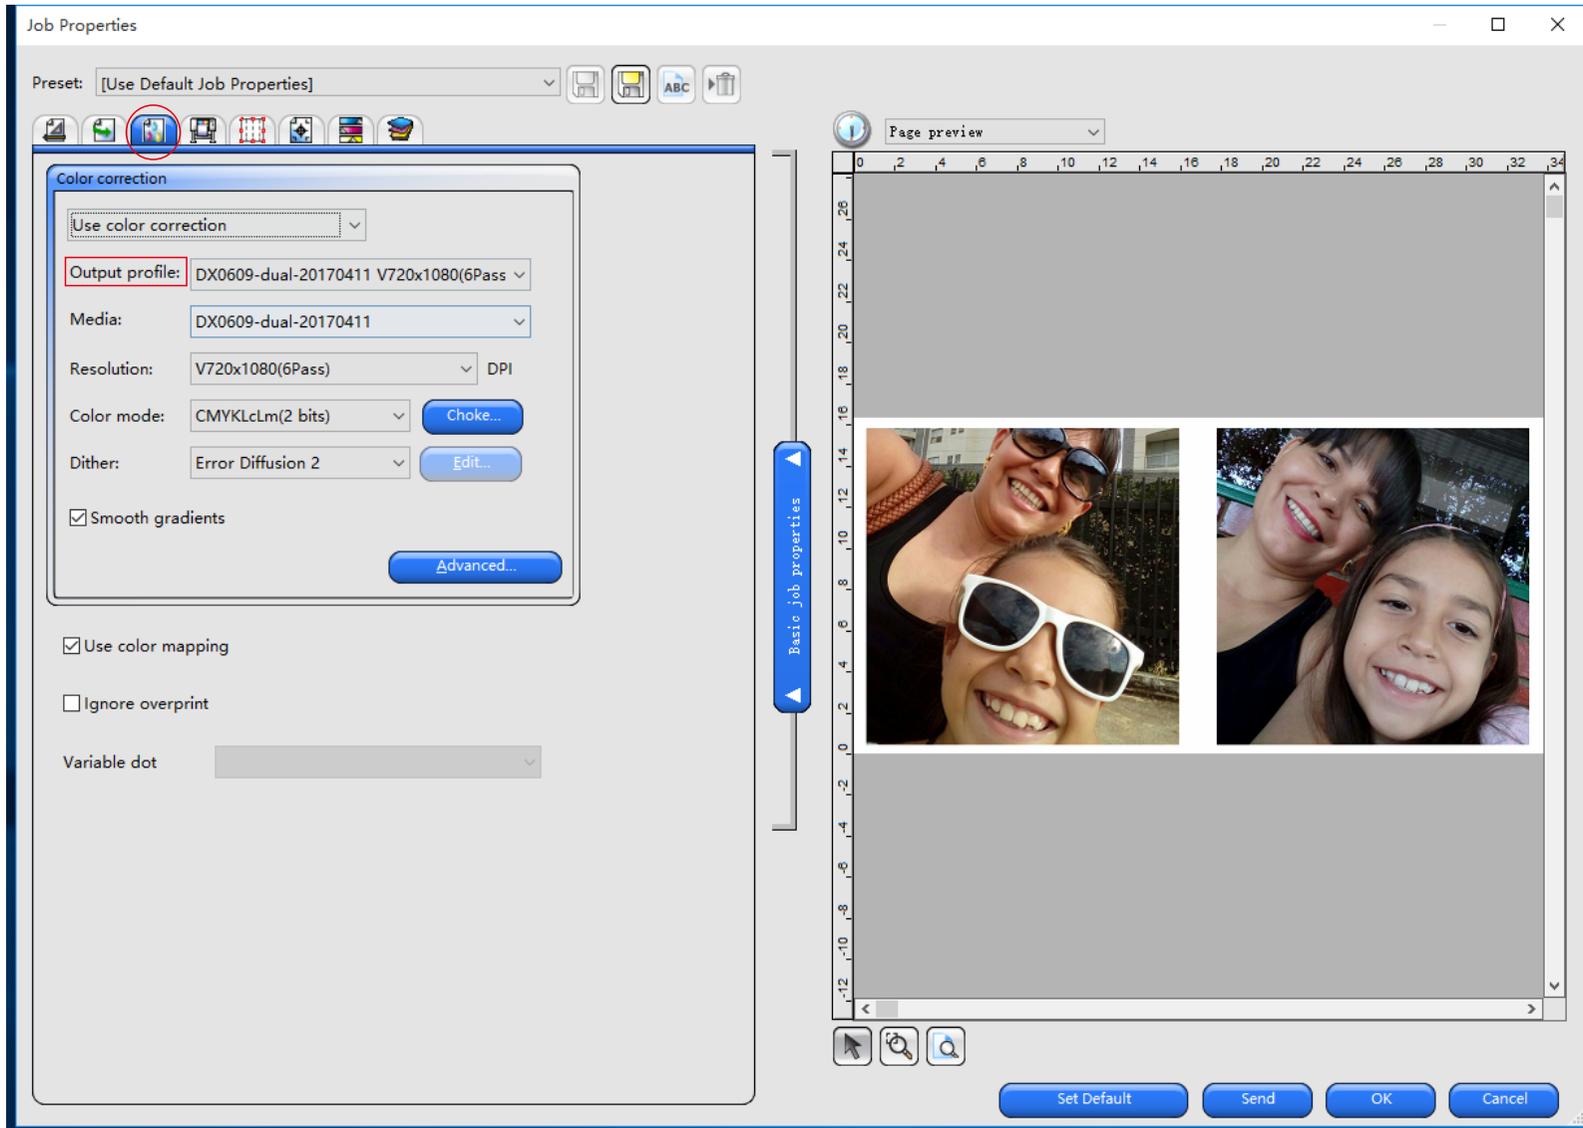


Page 4: Set white printing information: none means only colored ink print; spot color means to print white ink on the special parts; under color means print white just under the colored ink part; fill color version is just on contrary to under color version; substrate means print white color on the whole surface

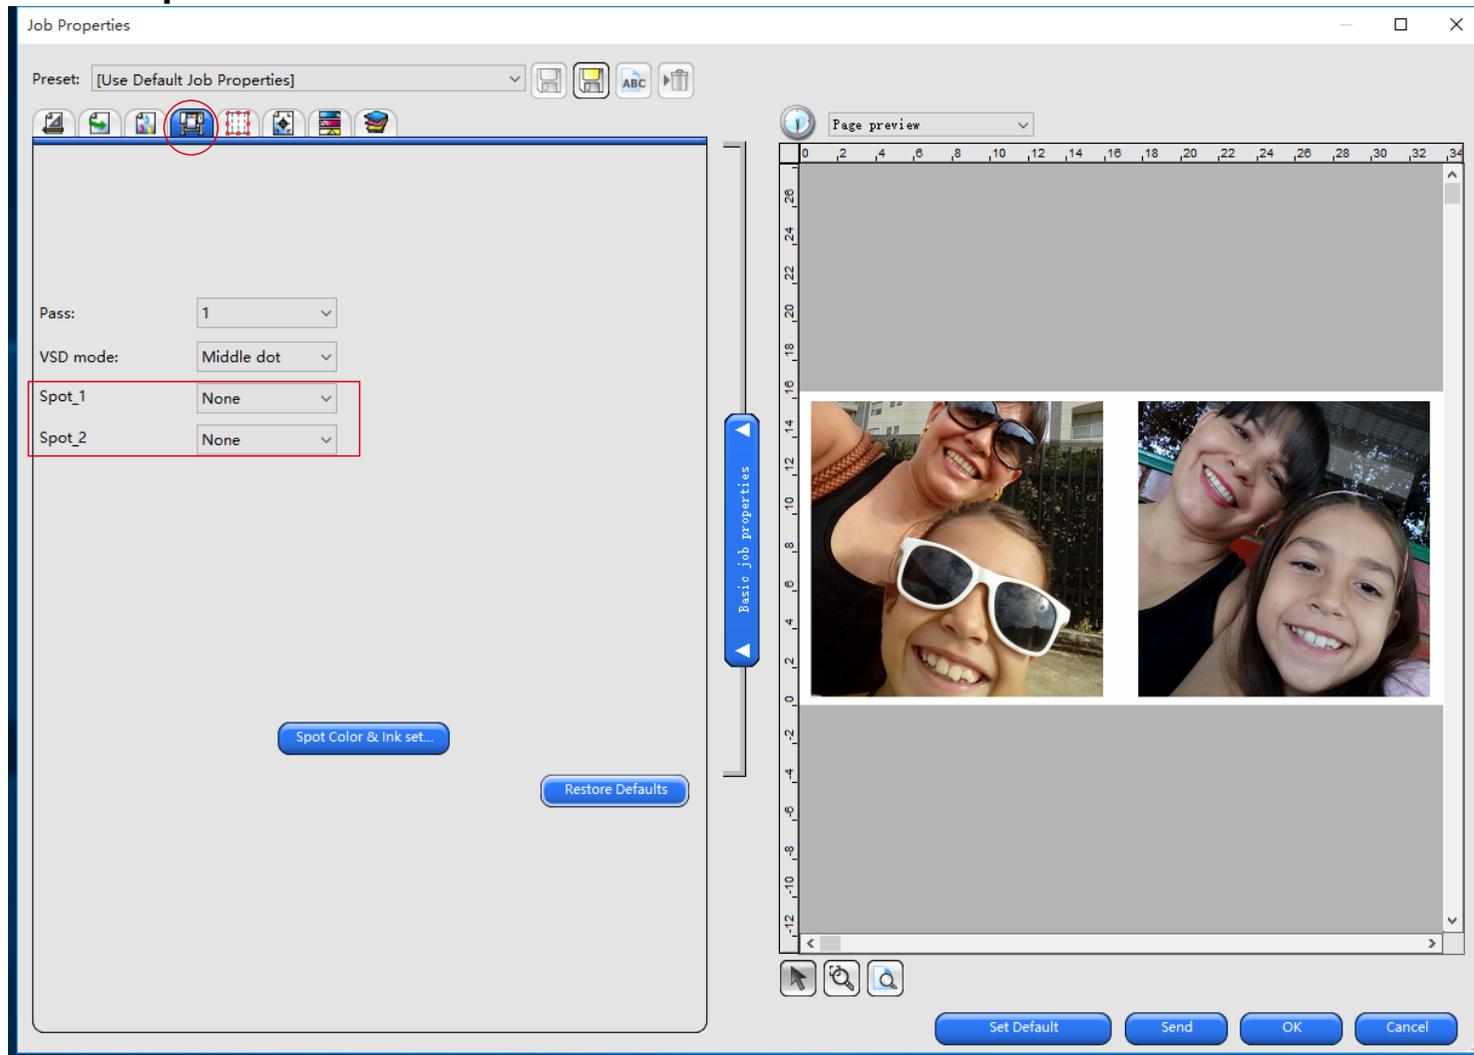


Page 5: Adjust the size of the part cutted from the Job. Print mark of the Job.

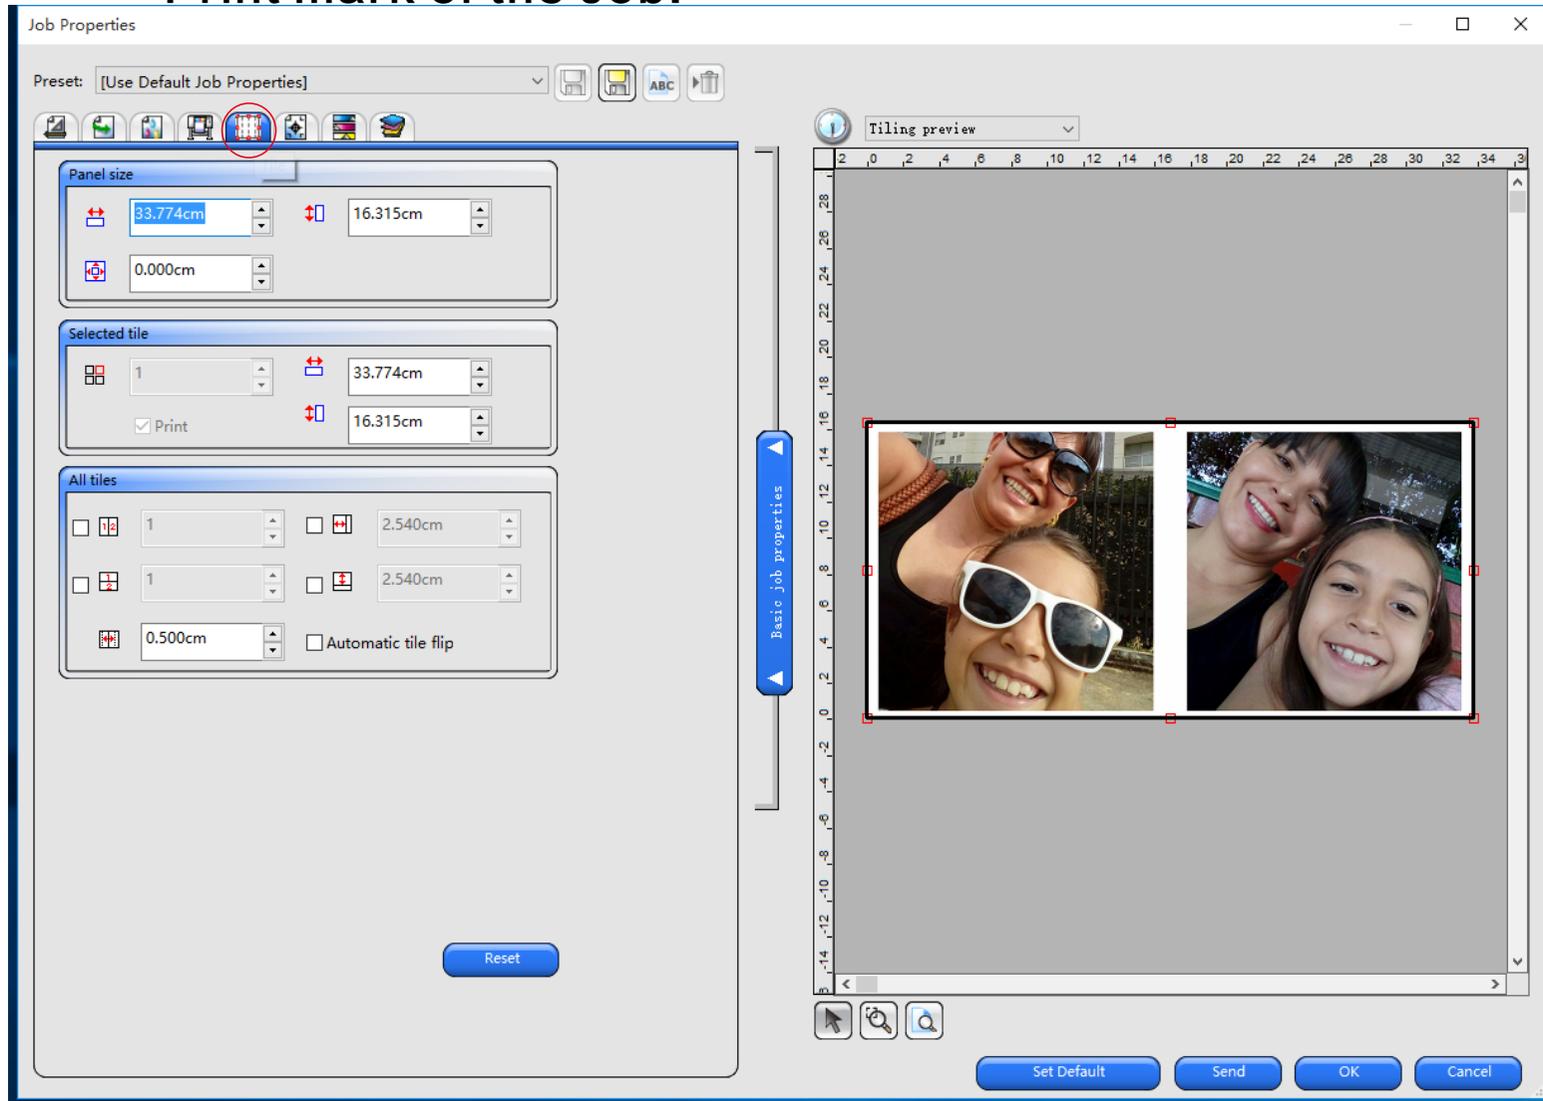



Page 7: Control the consumption of the ink to achieve the best printing quality (No need for uv ink, only works on textileink)

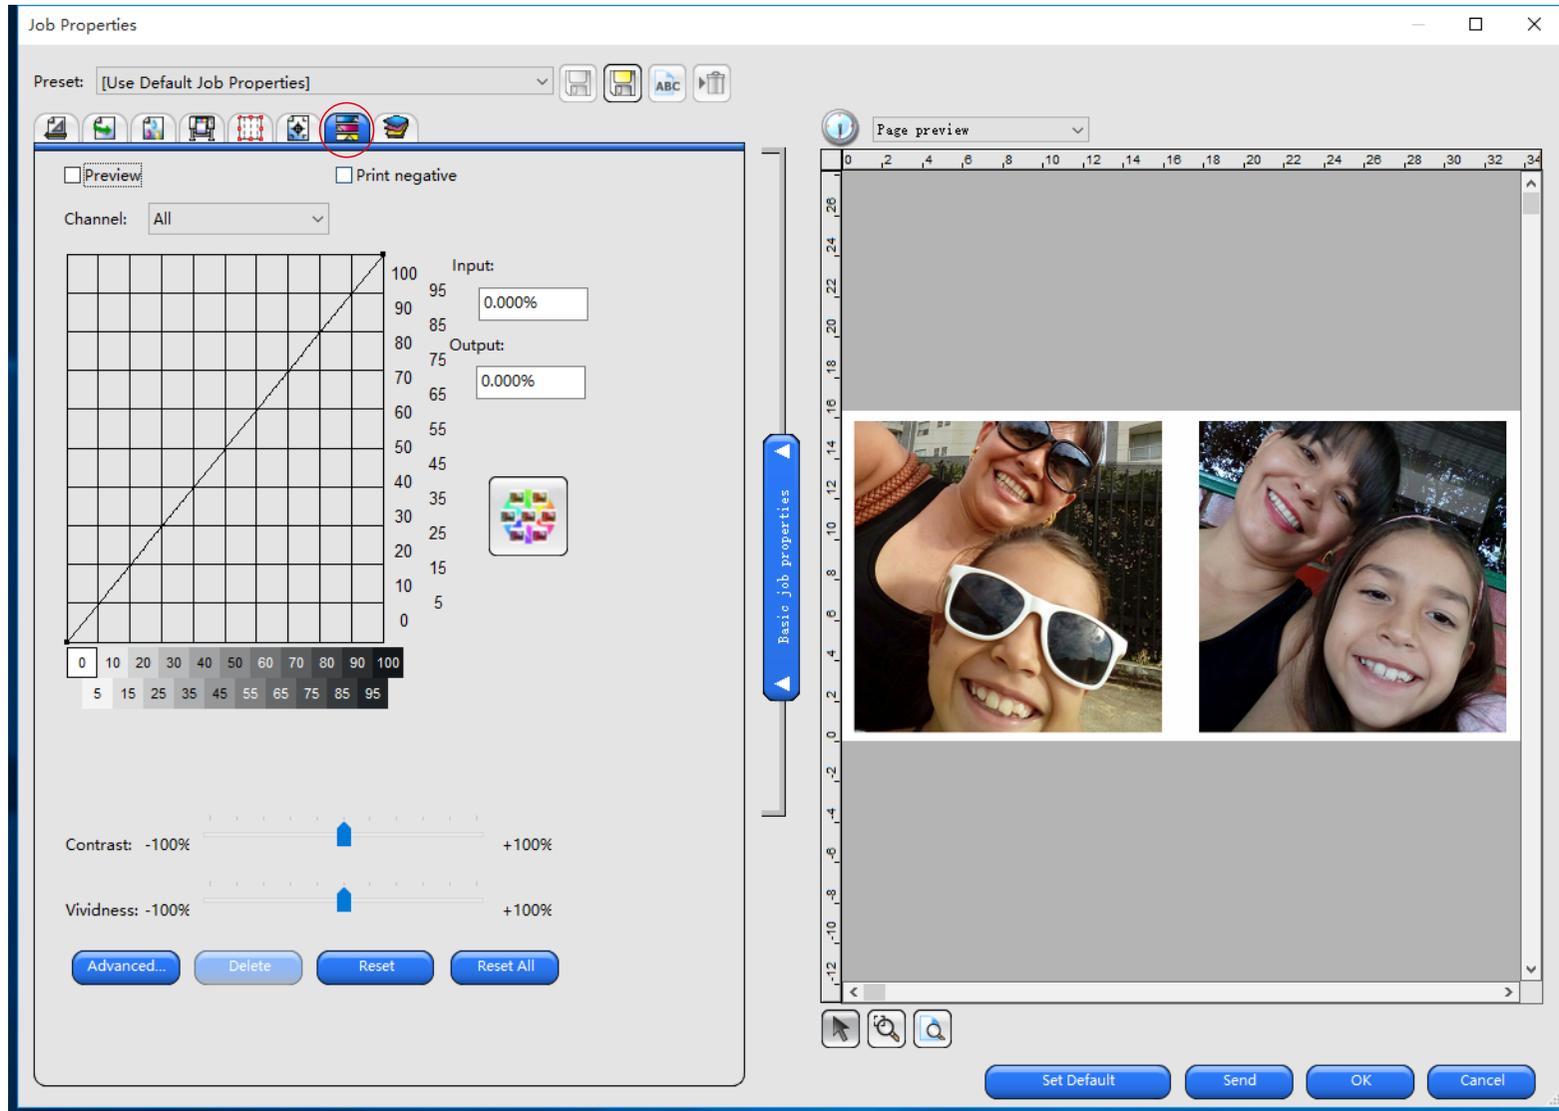


Printing spot color,channel
(Spot1 &spot2)should be selected according to the job.
Save all the settings.

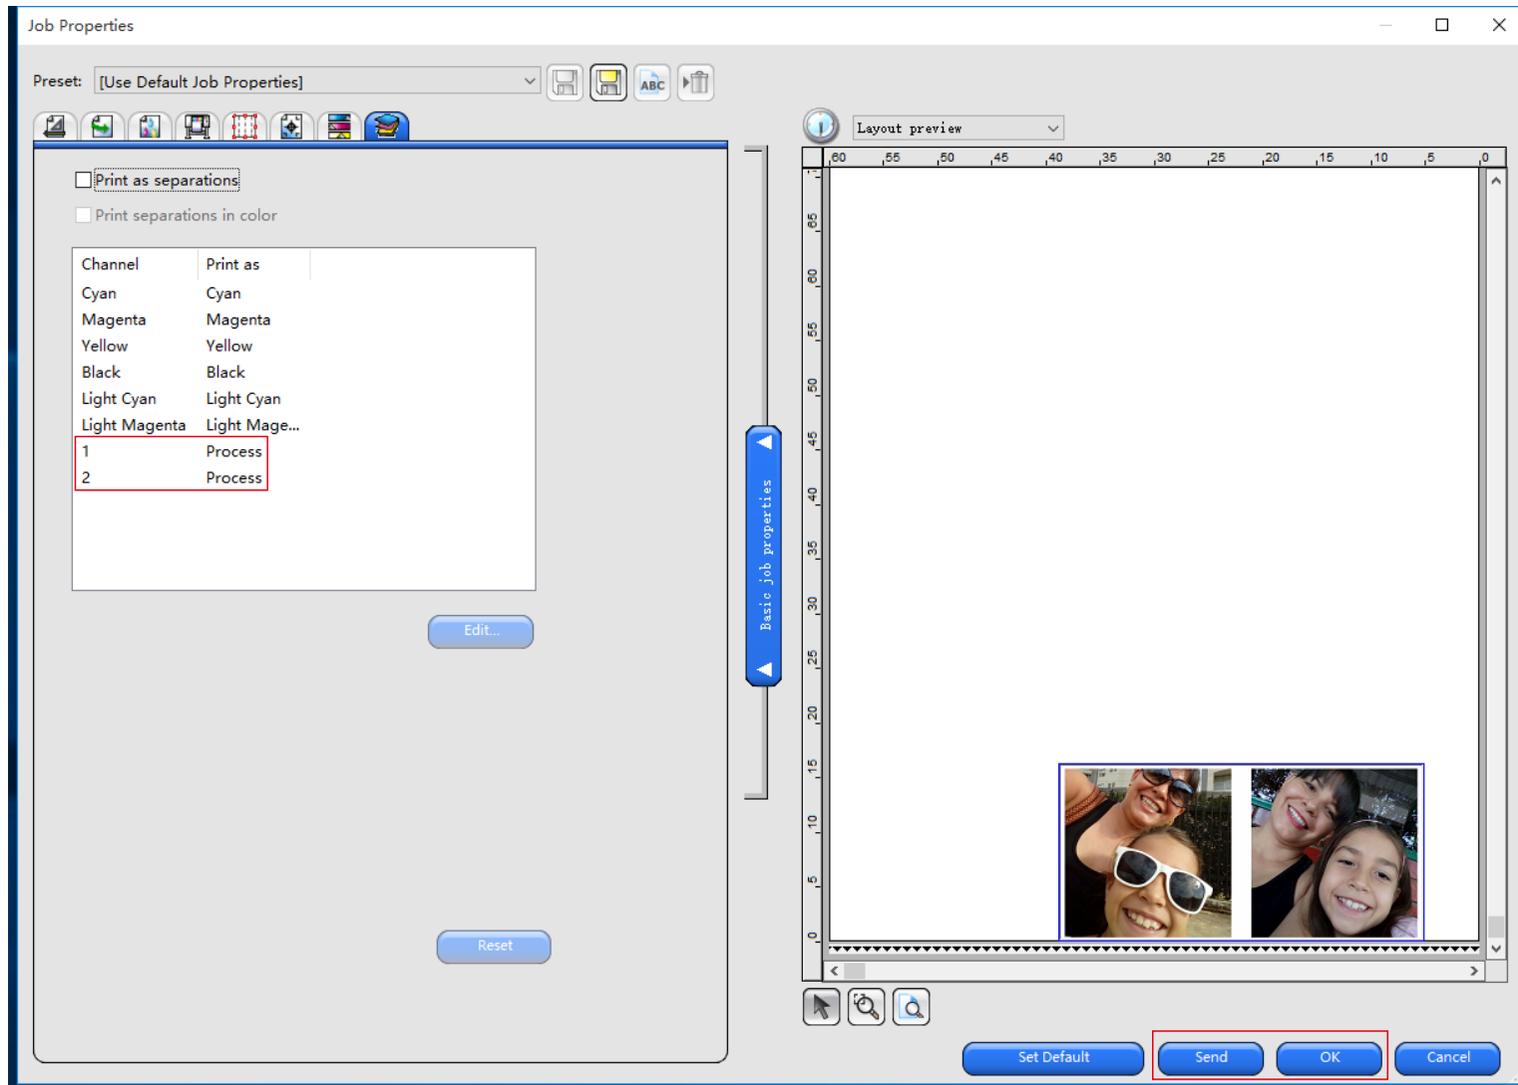

Set sequence of White ink & Color ink according to the Job, click apply of the Driver.

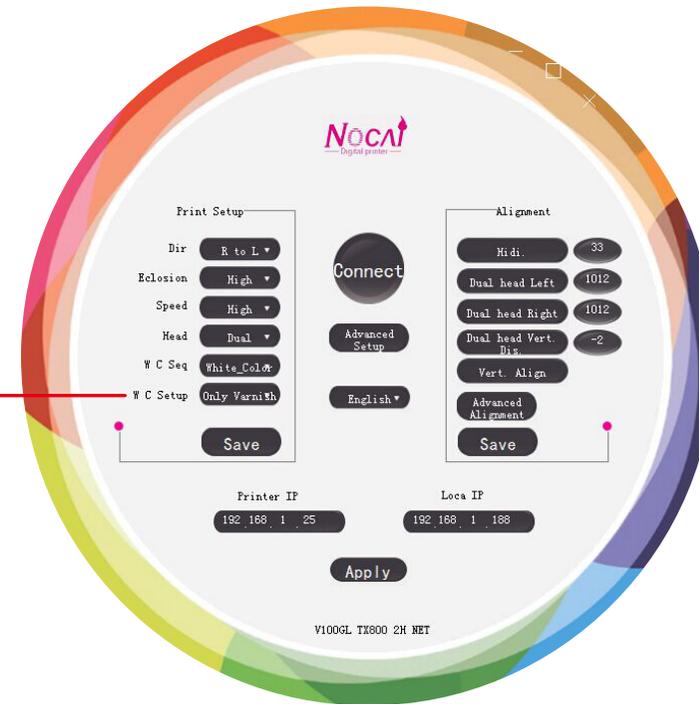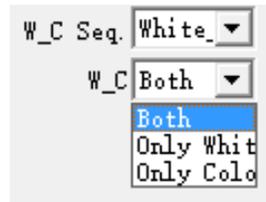

Put printing material on the table of the machine and make sure it's smooth & flat. Adjust the spray distance of printhead & material in 2-3mm Send

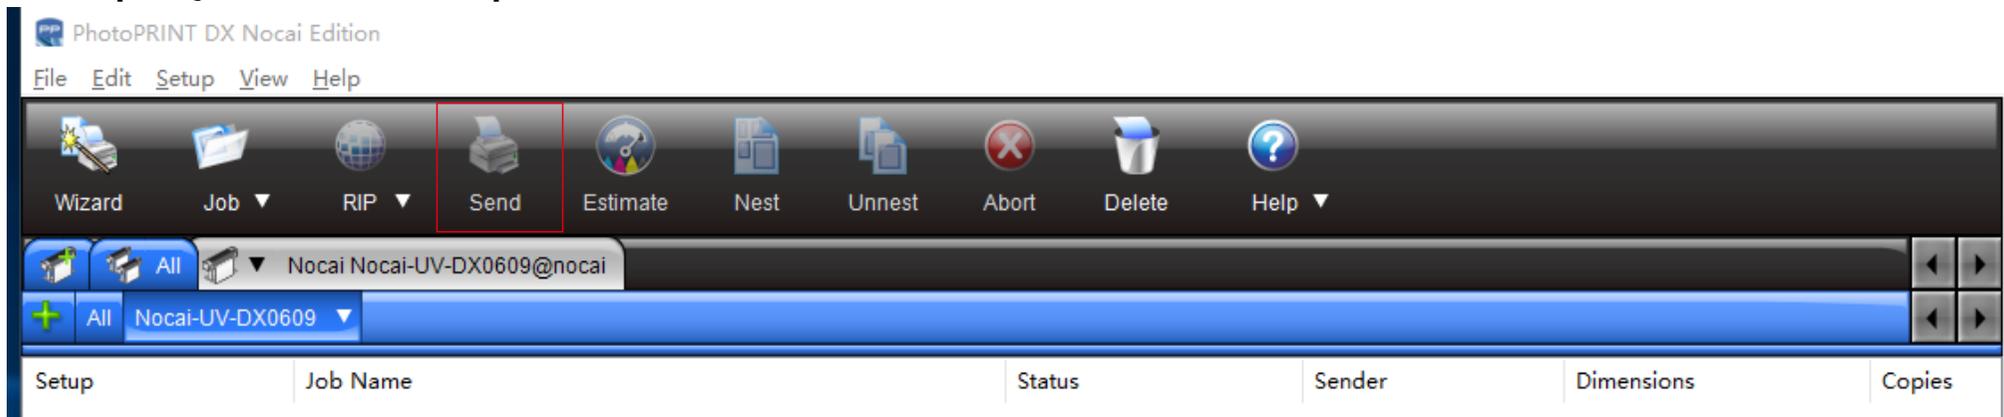

Thanks for your choice.

Choose NuoCai make a colorful life.